

CSC INTRO TO LAUNDRY

Easy Wash

1. **Add** detergent (if using laundry pods, place in wash tub.)

Using too much detergent can leave a residue on your clothing.



2. **Load** clothes into washer loosely.
3. **Close** the washer lid/door securely, without slamming.
4. **Select** desired wash settings.
5. **Insert** payment (if applicable) and push start.

HINT: Upon cycle completion, leave the washer lid/door open to help the drum dry quickly and prevent odor.

Simple Dry

1. **Clean** lint screen to keep the dryers running efficiently and save energy.
2. **Load** clothing. Make sure clothes can move freely to dry efficiently.
One wash load = One dryer load
3. **Select** desired dry settings (i.e. permanent press, low heat, high heat, etc.)
4. **Insert** payment (if applicable) and push start.

HINT: Do not dry wool, rubber, or plastic items.



Green Your Laundry Routine

1. **Use the cold water cycle** (whenever possible) since up to 90% of the energy used for washing clothes goes to heating the water.
2. **Remove clothes from the dryer immediately** to reduce the need for ironing. This saves time and energy!

