

WASHER & DRYER USAGE

HOW TO WASH




1 Add detergent.

Place 2 tablespoons of liquid detergent in the soap drawer or toss one laundry pod in the machine.



2 Sort clothing by color and soil level, and be sure to empty your pockets!

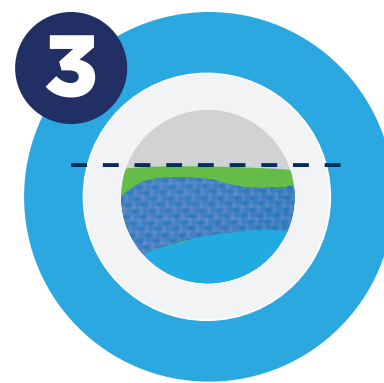

3 Place your clothing in the machine without over filling into the washtub and select cycle.



4 Enter payment (if applicable) and push start to begin washing.


HOW TO DRY



1 Clean the lint filter and place your wet clothing into the dryer.



2 Add a dryer sheet to reduce static and add softness.

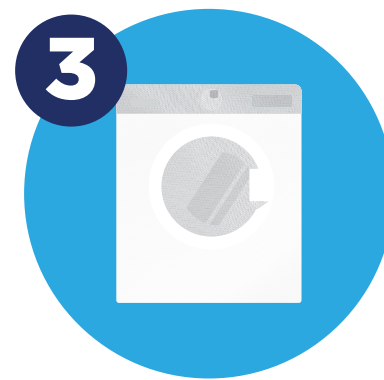

3 Close the dryer door securely and select the temperature.



4 Enter payment (if applicable) and push start to begin drying.

HELP US KEEP THE LAUNDRY ROOM & MACHINES IN GOOD CONDITION



Leave washer doors open after use to help the washer dry out quickly.



Always remove your clothes promptly from the machines so others can use them.



Clean up any spills that may have occurred while you are in the laundry room.



Report out of order machines. Download the CSC ServiceWorks Service App for easy reporting.